



AIR20NE – Chip Key Types

Manage Keys and Features of your AIR2-Family via Integrated or External Reader



MI-CKM4-0002-01DAIR

MI-CKM4-0002-01SAIR

Decoration Keyfob AIR2-LINE (Purple)

Supervisor Keyfob AIR2-LINE (Blue)

Copyright © 2017 MEMO International Ltd., F-17 Mosta Technopark, Mosta 3000, MALT, www.memolocks.com, Telephone: +356 21492262, E-mail: support@memo.co.at





AIR2ONE - Chip Key Types



Access Key Fob

Presenting the Access Key fob at the AIR2ONE Internal Reader / External Reader allows to open the showcase.

Access keys are neutral at delivery and must be programmed following the described procedures in this document. Lost or stolen Chip Keys must be reported to the management to avoid possible misuse!



System Card

Identify the system owner; they are required for all administrative operations such as setting changes or key programming.



Program Card

Is used for convenient programming of Access Key fobs via AIR2ONE Internal Reader / External Reader.



Erase Card

Is used to ERASE ALL keys in one go conveniently through the Internal Reader or External Reader!

After erasing Keys must be programmed again to resume normal operation!



Decoration Card

Allows convenient show case decoration without Warning Sounds and Door Open Limitations. MEMO recommends use of this card only outside normal shop opening times. Access to this cards should be granted only to authorized decoration staff.

(Optional Feature)



Supervisor Card

Are used by the Shop Supervisor to stop Intrusion Alarms. (Optional Feature)



Configuration Card

Allow the customized configuration of all important settings on AIR2ONE controllers. Contact your MEMO sales contact to order your personal Configuration Card.

(Optional Feature)