


HOW TO ERASE THE KEYS

Quick and easy. Step by step.



ATTENTION: All **ACCESS KEY FOBS + DECORATION CARD** and **SUPERVISOR CARD** will be erased.

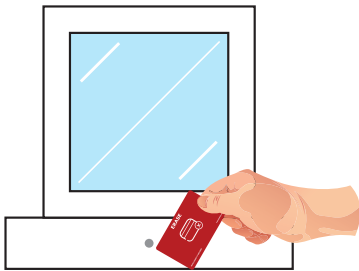


Present **ERASE CARD** to the reader.

Wait for the system confirmation sound indicating that the keys and or cards have been successfully erased.




System Ready

When presenting a successfully erased **ACCESS KEY FOB** or **CARD**, the door will **NOT** open and the **REJECT SOUND WILL BE HEARD**.

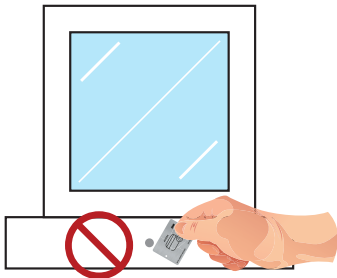


Reject Sound


CORRECT DOOR CLOSING. Perform a push and pull test on the door to ensure it's full locked.

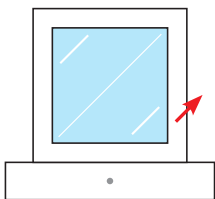

1. PUSH INSIDE to CLOSE

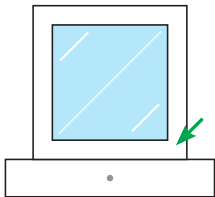

2. PULL OUTSIDE to CHECK

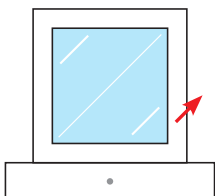

3. PUSH INSIDE to REMOVE TENSION

Perform this PUSH-PULL-PUSH closing EVERY time you close a door and drawer!