


HOW TO PROGRAM KEYS AT THE AIR2FOUR CONTROLLER

Quick and easy. Step by step.




IMPORTANT: You must present each key quickly with no more than **FOUR (4) SECONDS** between them. If you exceed this time, you'll need to restart the process.
Use your **finger to press the ACTIVATION BUTTON**. Tolls are **NOT** required for this controller.

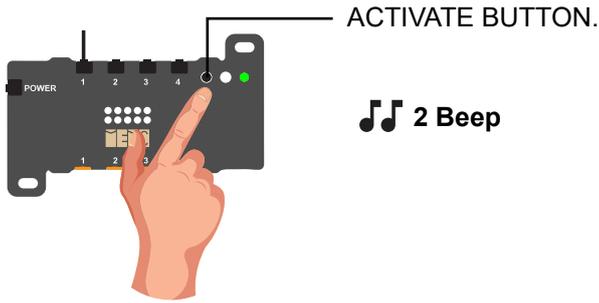

🎵 2 Beep


1) Press the ACTIVATION BUTTON.

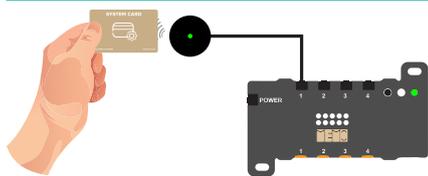

7 Beep
🎵🎵🎵🎵🎵🎵🎵




Present **SYSTEM** Card to the Reader

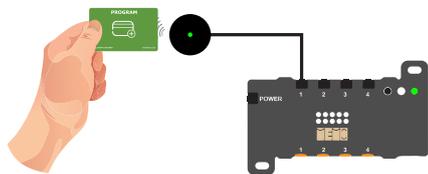

🎵 2 Beep




Present **PROGRAM** Card to the Reader

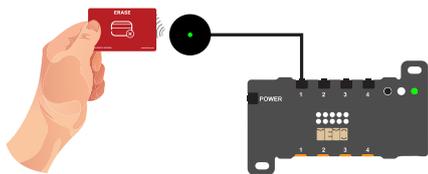

🎵🎵 3 Beep




Present **ERASE** Card to the Reader

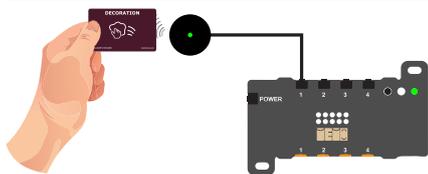

🎵🎵🎵 4 Beep




Present **DECORATION** Card to the Reader

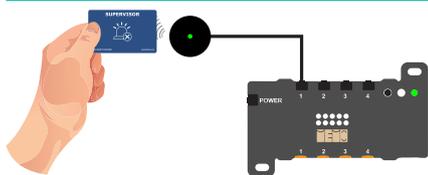

🎵🎵🎵 5 Beep




Present **SUPERVISOR** Card to the Reader

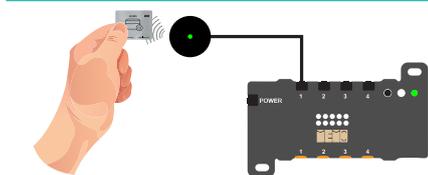

🎵 1 Beep



Present **ACCESS KEY FOB** to the Reader

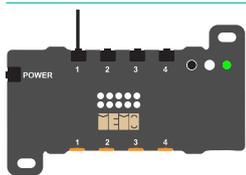

Wait for system confirmation sound to signify that the Keys and Cards have been successfully programmed.



System Ready