

# HOW TO PROGRAM KEYS AT THE AIR2MINI CONTROLLER

## Quick and easy. Step by step.



**IMPORTANT:** You must present each key quickly with no more than **FOUR (4) SECONDS** between them. If you exceed this time, you'll need to restart the process.  
Use a small object like a pen / pencil or a screw driver to press **ACTIVATION BUTTON**.

<p>ACTIVATE BUTTON.</p> <p>🎵 2 Beep</p>	<p>1) Press the ACTIVATION BUTTON.</p> <p>🔄 4s</p>
<p>🎵 7 Beep</p>	<p>1X SYSTEM CARD</p> <p>Present <b>SYSTEM</b> Card to the Reader</p> <p>🔄 4s</p>
<p>🎵 2 Beep</p>	<p>1X PROGRAM</p> <p>Present <b>PROGRAM</b> Card to the Reader</p> <p>🔄 4s</p>
<p>🎵 3 Beep</p>	<p>1X ERASE</p> <p>Present <b>ERASE</b> Card to the Reader</p> <p>🔄 4s</p>
<p>🎵 4 Beep</p>	<p>1X DECORATION</p> <p>Present <b>DECORATION</b> Card to the Reader</p> <p>🔄 4s</p>
<p>🎵 5 Beep</p>	<p>1X SUPERVISOR</p> <p>Present <b>SUPERVISOR</b> Card to the Reader</p> <p>🔄 4s</p>
<p>🎵 1 Beep</p>	<p>1X ACCESS</p> <p>Present <b>ACCESS KEY FOB</b> to the Reader</p> <p>🔄 4s</p>
<p>Wait for system confirmation sound to signify that the Keys and Cards have been successfully programmed.</p>	<p>👂  System Ready</p>