


# HOW TO PROGRAM KEYS AT THE AIR2ONE INTERNAL READER CONTROLLER - Quick and easy. Step by step.



**IMPORTANT:** You must present each key quickly with no more than **FOUR (4) SECONDS** between them. If you exceed this time, you'll need to restart the process.  
Use a small object like a pen / pencil or a screw driver to press **ACTIVATION BUTTON**.

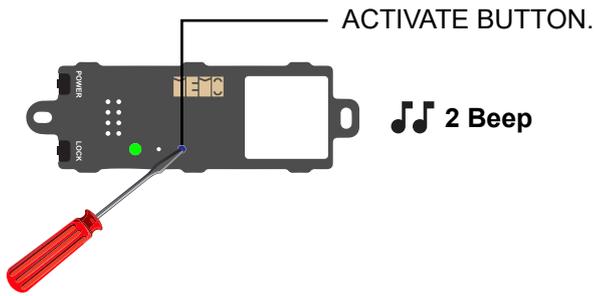


🎵 2 Beep

1) Press the ACTIVATION BUTTON.



🎵 7 Beep

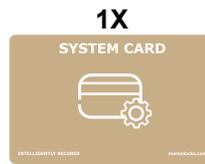

Present **SYSTEM** Card to the Controller



🎵 2 Beep



Present **PROGRAM** Card to the Controller



🎵 3 Beep



Present **ERASE** Card to the Controller



🎵 4 Beep



Present **DECORATION** Card to the Controller



🎵 5 Beep



Present **SUPERVISOR** Card to the Controller



🎵 1 Beep



Present **ACCESS KEY FOB** to the Controller



Wait for system confirmation sound to signify that the Keys and Cards have been successfully programmed.



System Ready