 


Prepare an AIR2-LINE Consignment in the WORKSHOP


Prepare a number of controllers for a project as long as they are easily accessible.
Prepare a set of **SYSTEM CARD + SPECIAL FUNCTION CARDS + ACCESS KEYS**.
That shall be programmed in the batch of controller.

EVERY AIR2-LINE Controller must be programmed with a SYSTEM CARD + SPECIAL FUNCTION Cards BEFORE the installation in a show case.
The SYSTEM CARD MUST be handed over to the final user.


1. Connect Reader to the Controller.
2. Connect Controller to Power and wait until beep sounds.

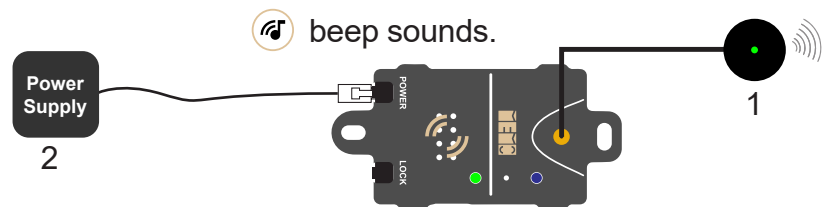

3. Press ACTIVATE button and watch for the LED to start GREEN blinking. (AIR2-LINE must be connected to the Power)

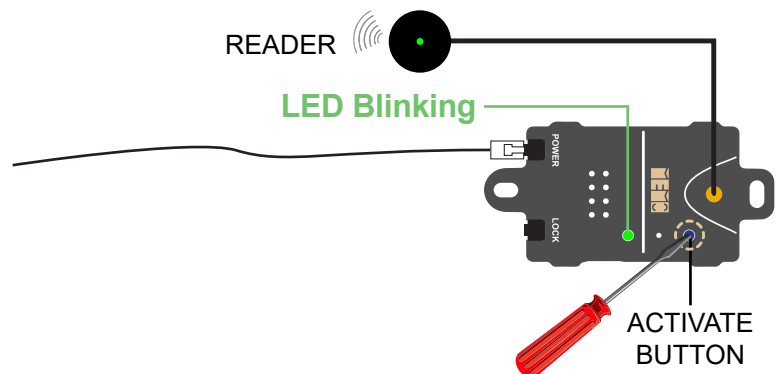


4. Present ANY Cards, Special Function Cards, and Key Fobs one-by-one, in NO SPECIFIC ORDER, to the READER at intervals not exceeding 4 seconds.

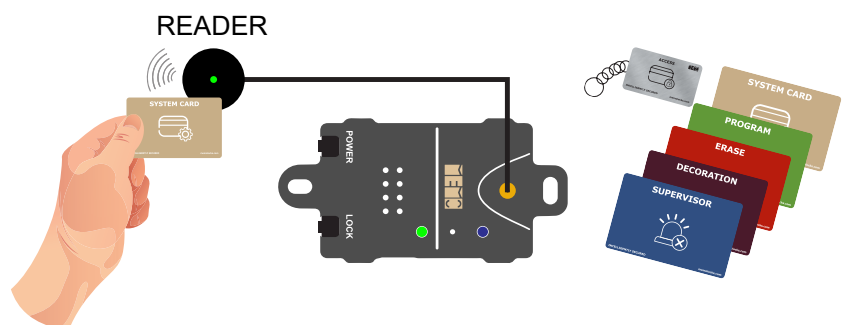

After last key/card was presented, watch out for the significant 3-tone reboot-sound.

LED Stops Blinking GREEN, signaling that the AIR2-LINE is ready.

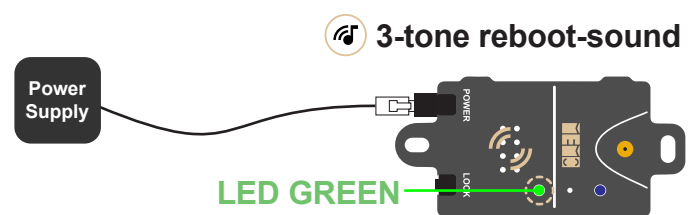

Repeat the same process from STEP 1 for all the controllers.