



MEMO LOCK APP

How to activate Open Door Warning - User Guide



HOW TO ACTIVATE OPEN DOOR WARNING

Quick and Easy Step-by-Step

ATTENTION: After opening a door or drawer, a sound alert will be triggered whenever such doors or drawers are left open for too long.




This gets the attention of sales people in the shop, and helps to reduce the risk of theft or unauthorized access to valuable items.


IMPORTANT: The default sound is a constant beep, with the default warning time set to 30 seconds. The sound alert operates at 50% volume.




Video Tutorial

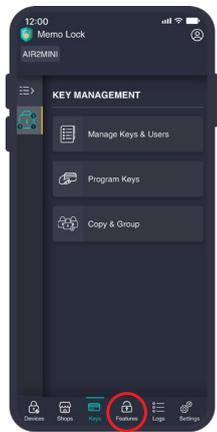

Open the app.
In the bottom menu, select “Features”.

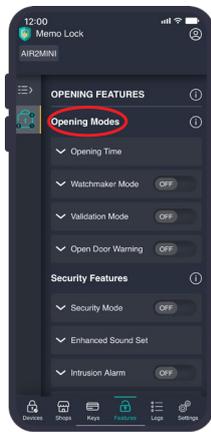


On the displayed screen, locate the Opening Modes list.

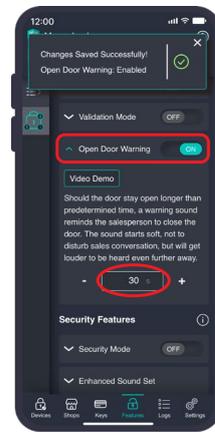

Enable “Open Door Warning” feature.

The default value is 30 seconds.


A confirmation message will appear automatically

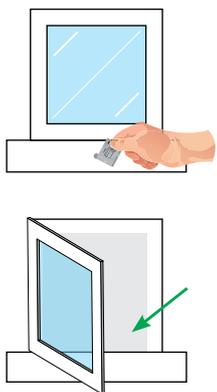


Present an authorized Access Key and open the showcase.





After 30 seconds, the sound alert will be triggered.

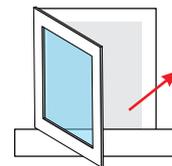

To stop the sound alert, close the showcase door.

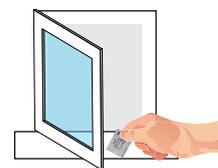

Or present an authorized access key again.

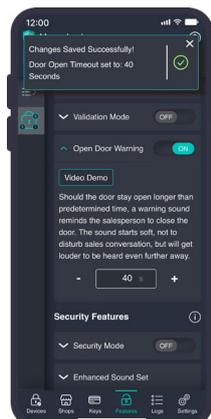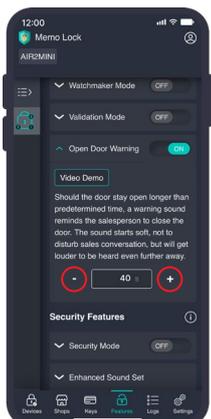


Use the plus or minus buttons to adjust the time.


In this example, we will set it to 40 seconds.

A confirmation message will appear automatically:



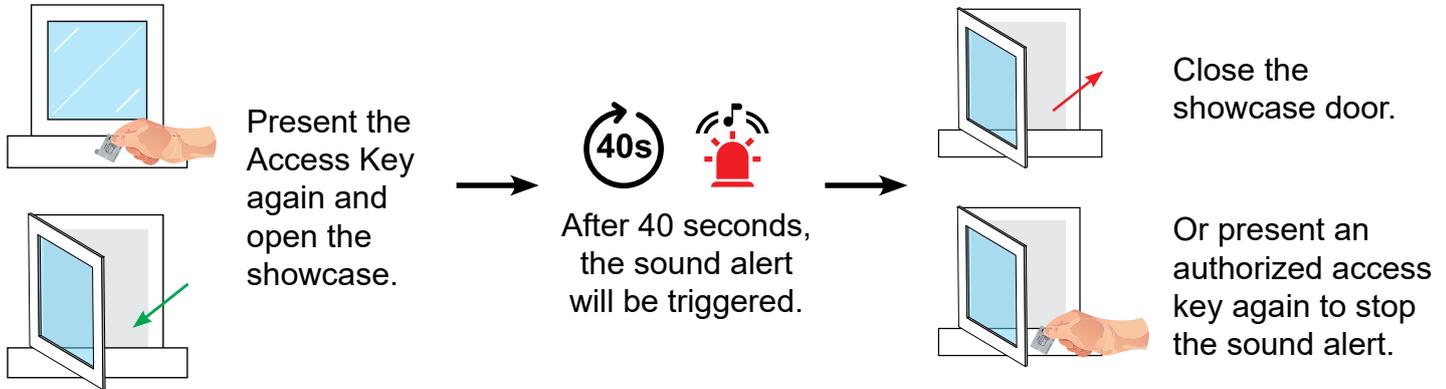

CORRECT DOOR CLOSING. Perform a push and pull test on the door to ensure it's full locked.

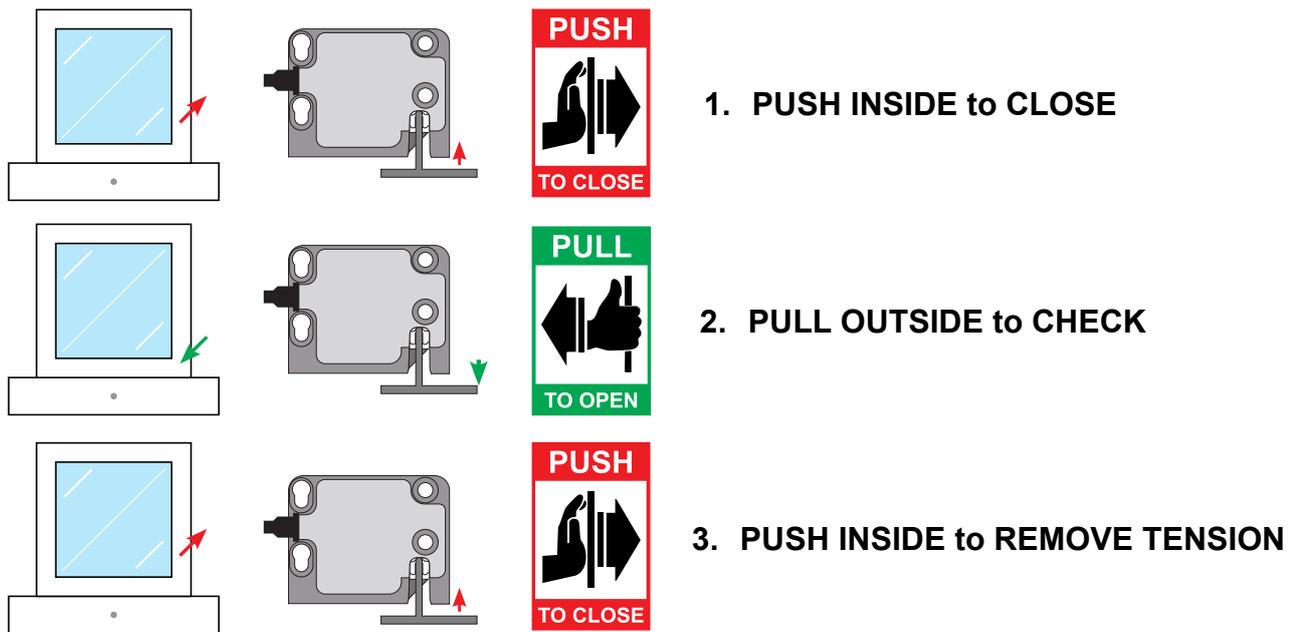

Perform this PUSH-PULL-PUSH closing EVERY time you close a door and drawer!

CONCLUSION

By following this guide, you will be able to **SET UP** your system consisting of **MEMO AIR2-LINE** and **DEM EVO3** devices using **MEMO LOCK APP**. For additional support, contact the MEMO team via the official website or the technical support information provided in the product materials.

Thank you for choosing the most versatile and powerful security system.